

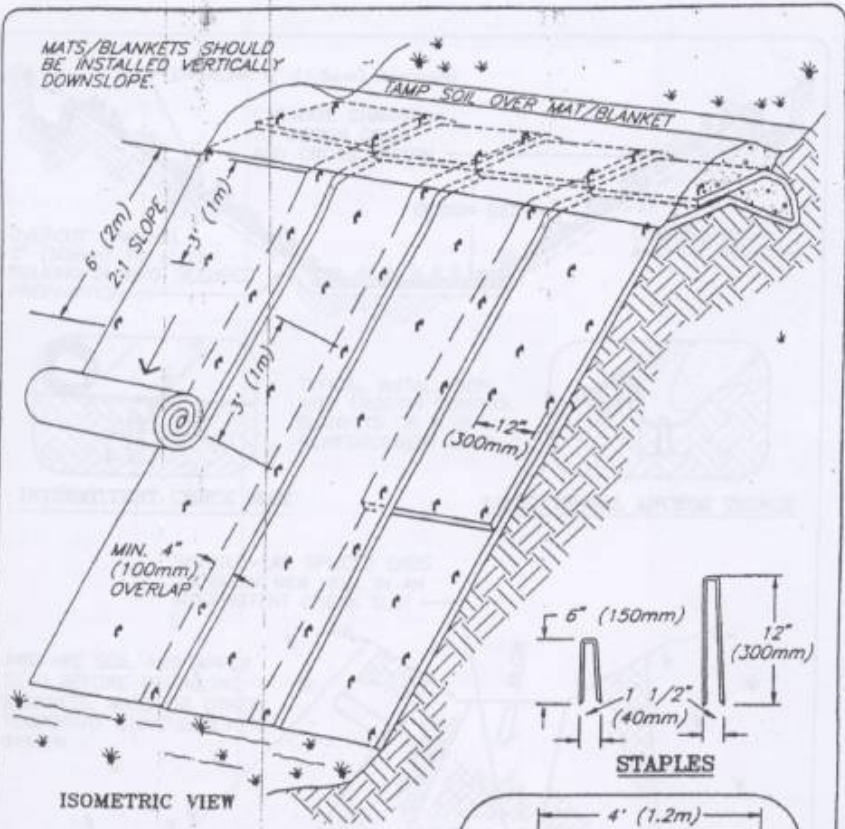


MATS/BLANKETS SHOULD BE INSTALLED VERTICALLY DOWNSLOPE.

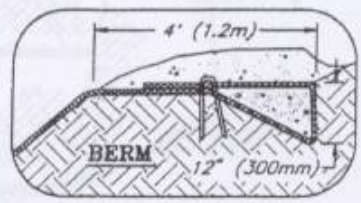

TYPICAL SLOPE SOIL STABILIZATION

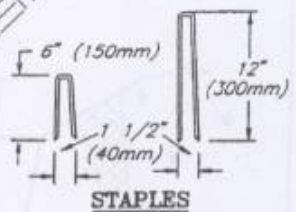

NOT TO SCALE

- NOTES:
1. SLOPE SURFACE SHALL BE FREE OF ROCKS, CLODS, STICKS AND GRASS. MATS/BLANKETS SHALL HAVE GOOD SOIL CONTACT.
 2. APPLY PERMANENT SEEDING BEFORE PLACING BLANKETS.
 3. LAY BLANKETS LOOSELY AND STAKE OR STAPLE TO MAINTAIN DIRECT CONTACT WITH THE SOIL. DO NOT STRETCH.

EROSION BLANKETS & TURF REINFORCEMENT MATS SLOPE INSTALLATION

© 1994 JOHN MCCLELLAN
FILE: BUNKSLP